

# LEVELNIC L-Base · DL-SL Owners Manual



Thank you for purchasing the LEVELNIC DL-SL.

Please read this manual before use to insure proper operation and a long service life.

## FEATURES

- L-Base attachment for use with LEVELNIC electronic level to adapt for measuring vertical surfaces.
- Increases base length of LEVELNIC to 200mm when attached. (Measurement pitch changes from 150mm → 200mm when used.)
- V-Groove on measurement surface for use on flat and cylindrical vertical surfaces.
- Includes magnet with ON/OFF switch on side surface for use when making vertical measurements. (High power magnet may have some residual magnetism when switched OFF.)

## SPECIFICATIONS

Base Dimensions: 200×255×55(mm)

Measurement Surface: 200×200×55(mm)

Base Squareness: within  $\pm (20 + L/10)$  ( $\mu$ )

Base V-Groove angle: 130°

Compatible Models: DL-S3 · DL-S4W · DL-S2W

## ACCESSORIES


M5×25 Cap Screws (x2), Wrench, Aluminum case, Owner's Manual.

## MOUNTING

Figure 1, 2: Attach the compatible LEVELNIC onto the L-Base.

Figure 2: With the LEVELNIC in position, secure using the M5x25 (x2) cap screws.


※NOTICE: Do not over-tighten the cap screws or the Base surface may be distorted.

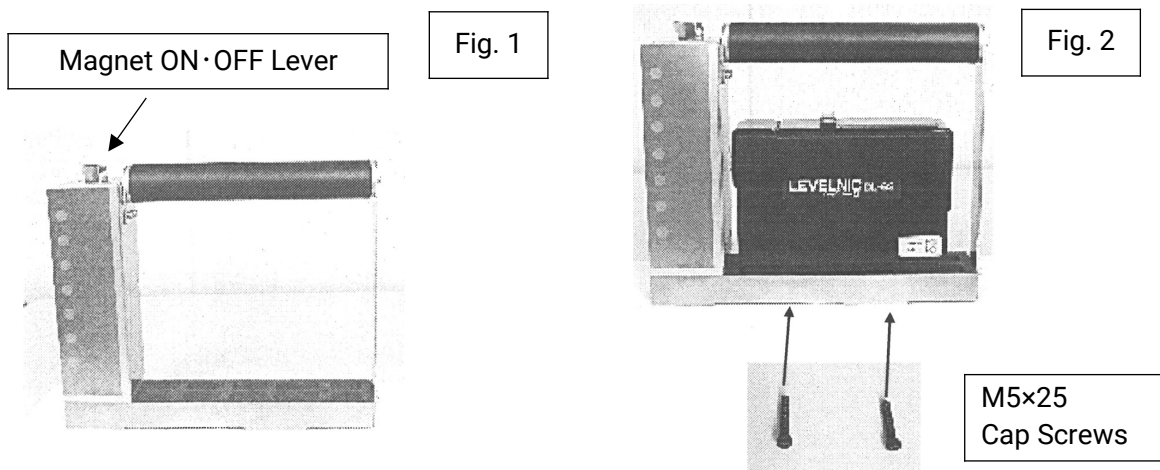

• Please Note: Specifications subject to change without notice.

## WHEN USED WITH OPTIONAL DL-BW

Mounting Drawing

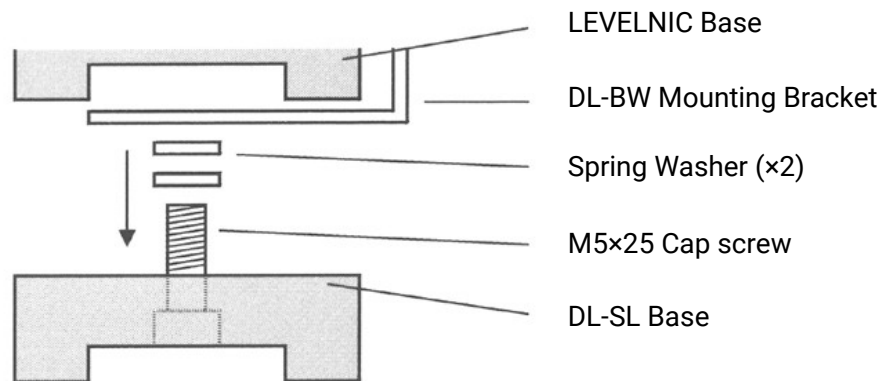

When mounting the DL-BW, please install two spring washers between the DL-BW Mounting Bracket and the DL-SL as shown in the drawing above. If the washers are left off, the gap will cause the DL-BW to be unstable.

NIIGATA SEIKI CO., LTD

6-15-22, Tsukanome, Sanjo-city, Niigata 955-0055 JAPAN

TEL: 0256-31-5670