 
STYLUS for AP-03

INSTRUCTION MANUAL
Model No. AP-PH3

 
Thank you for purchasing the replacement Stylus for the AP-03 Pneumatic Engraver.

Before Replacing your Stylus, please read this manual thoroughly and use according to the procedures described.

1) Remove Cap by rotating in direction shown by the arrow.



② Remove the Stylus from the Cap and replace with the new Stylus.



SPECIFICATIONS

- ●Size:Shaft Diameter… ϕ 2.9mm, Total Length…38mm
- ●Weight:4g

↑ CAUTION

- Modification of the Stylus may cause accident, injury, or damage to product. Please do not modify under any circumstances.
- Stylus is sharp. Handle with care and never point tip at person.
- · Use only as directed.

 If Engraver does not operate after replacing Stylus, please contact distributor or place of purchase.

Niigata seiki Co., Ltd.

6-15-22, Tsukanome, Sanjo, Niigata, Japan, 955-0055 Tel.:+81-256-31-5660 Fax.:+81-256-39-7730 MAIL:intl.sales@niigataseiki.co.jp URL http://www.niigataseiki.co.jp