



Thank you for purchasing the Digital Calipers.  
For proper operation, please read this manual thoroughly before use.

## PARTS IDENTIFICATION

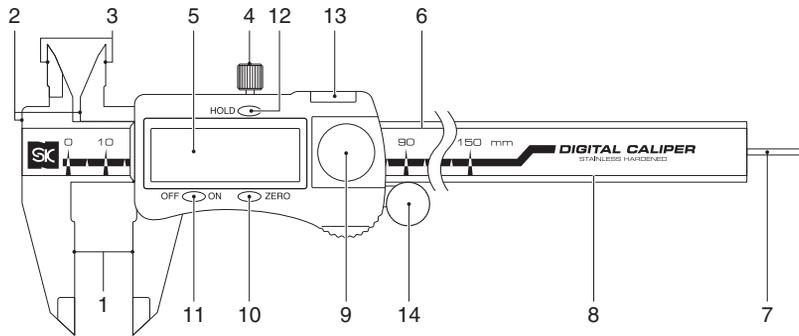

- |   |                         |
|---|-------------------------|
| 1.Measuring Surfaces for Outside Measurements | 7.Depth Bar             |
| 2.Measuring Surfaces for Step Measurements    | 8.Main Beam             |
| 3.Measuring Surfaces for Inside Measurements  | 9.Battery Cover         |
| 4.Lock Screw                                  | 10.[ZERO] Button        |
| 5.LCD Display                                 | 11.[ON/OFF] Button      |
| 6.Scale                                       | 12.[HOLD] Button        |
|   | 13.Output Connector (*) |
|   | 14.Thumb Wheel          |

(\*)Output connector function not available for this model.

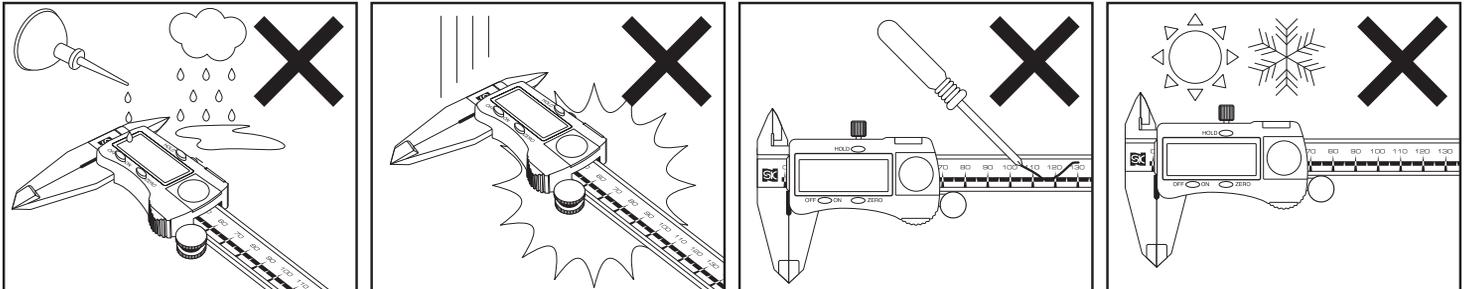


## PLEASE NOTE

- Before use, please wipe off corrosion protectant using a soft, oiled cloth.
- This is a precision instrument, handle with care. Do not drop or subject to excessive force.
- Do not damage scale or scratch instrument. Do not apply ID numbers with engraver.
- Keep away from direct sunlight. Do not store instrument in extreme temperatures.

## BATTERY REPLACEMENT

1. Slide cover in direction of arrow.

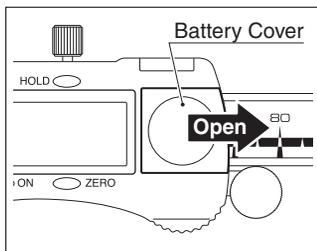

2. Insert battery with (+) side outward.
3. Replace battery cover.

**Notice** Use only SR44 type battery.

## OPERATION

<Absolute Measurement>

1. Turn on power.
2. Press [ZERO] button with caliper jaws fully closed.
3. When display reads "0.00mm", caliper is ready for use.

<Relative Measurement>

1. Turn on power.
2. Open the caliper jaws to desired reference value and press [ZERO] Button (OK at any position).
3. When display reads "0.00mm", caliper is ready for use.

**Notice** Use care to prevent the Thumb Wheel from coming loose when jaws are fully opened.

## TROUBLESHOOTING

- Q. Nothing is displayed, or the numbers are flashing.  
A. Is the battery running low?
- Q. With power on, the number on the LCD does not change as main slide is moved.  
A. Please reset by removing battery for about 30sec., and then replacing.
- Q. Nothing happens when buttons are pressed.  
A. Is the battery inserted properly?
- Q. The characters "MIN", "MAX", or "△" are displayed on LCD.  
A. Cycle power, or apply several long presses to [HOLD] Button. Use as normal once character is off.

## SPECIFICATIONS

- Resolution:0.01mm
- Instrument Error:±0.03mm
- Display:5-Digit LCD
- Maximum Response Speed:Opening:1.5 m/s  
Closing:0.75 m/s
- Operating Temperature Range:0°C~40°C
- Storage Temperature Range:-10°C~60°C
- Power:Silver Oxide Battery, SR44, 1.55V
- Battery Life:Approx. 1 year with normal usage
- Accessories:Silver Oxide Battery, SR44, 1.55V, (for testing)

**SK Niigata seiki Co., Ltd.**

6-15-22, Tsukanome, Sanjo, Niigata, Japan, 955-0055  
Tel.: +81-256-31-5660 Fax.: +81-256-39-7730  
MAIL:intl.sales@niigataseiki.co.jp  
URL http://www.niigataseiki.co.jp