

SK DIAL GAUGE ATTACHMENT

INST. MANUAL


Model : D - 0514A

Thank you for purchasing the Dial Gauge Attachment.
Please read this manual thoroughly before use for proper operation.

APPLICATIONS

- Chuck replaces Dial Gauge tip for adapting the Gauge for special measurement applications.
- Pin gauge, needle gauge, etc. can be mounted on the Dial Gauge when the chuck is mounted.

PARTS ID

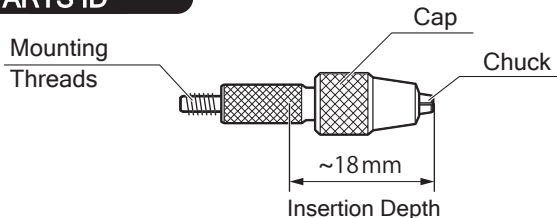

SPECIFICATIONS

Chuck Diameter Range	Mounting Threads	Insertion Depth
$\phi 0.5 \sim 1.4 \text{ mm}$	M2.5 \times P0.45	$\sim 18 \text{ mm}$

- Material : Brass ● Weight : $\sim 5\text{g}$


※Pin Gauge and contact pins not included. Please purchase separately.

⚠ NOTICE

- Insert contact pin the full depth and tighten chuck securely.
- Use only as directed.

HOW TO USE


1. Loosen Chuck Cap and insert the Contact Pin into the center. (Fig. 1)

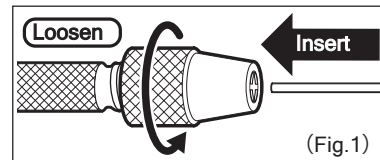


2. Tighten the Chuck Cap to secure. (Fig. 2)

⚠ NOTICE

To Install, Loosen the Gauge Contact Tip, and screw on the Chuck securely.

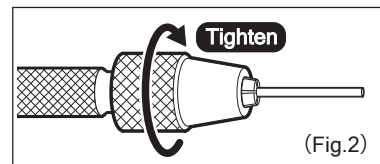

3. To Install, remove the Gauge Contact Tip, and screw on the Chuck securely.

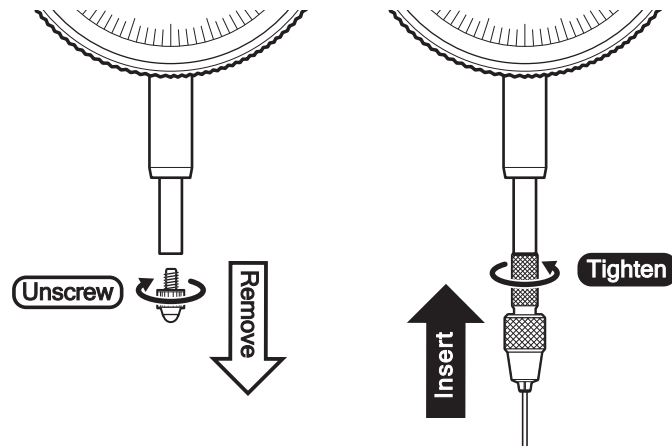

SK Niigata Seiki Co., Ltd.

5-3-14 Tsukanome, Sanjo, Niigata, Japan, 955-0055
 ☎ +81-256-33-5522 FAX : +81-256-33-5518
 MAIL: intl.sales@niigataseiki.co.jp
 URL: <http://www.niigataseiki.co.jp>

I416-K 2005