

For ALD Series  
Snap Gauges

# SNAP GAUGE STAND

Thank you for purchasing the Niigata Seiki Snap Gauge Stand. This stand is designed specifically for mounting the ALD Series Snap Gauge (purchased separately) for measurement of precision parts.

- For safe and proper use of this product, please read this instruction manual before use and follow the procedures described. Please keep manual where it is accessible to user for future reference.
- Keep this manual with the instrument if transferred or leased to a third party.
- For inquiries about this product, please contact dealer or Niigata Seiki at the address listed on the following page.

 
## SAFETY NOTIFICATIONS

In this manual, ⚠ indicates RISK OF PERSONAL INJURY OR PROPERTY DAMAGE if not followed. The ⚡ symbol indicates something which is PROHIBITED, and the Ⓢ symbol indicates REQUIRED step or necessary condition.

## SAFETY PRECAUTIONS

Please  
Observe

Always follow the procedures specified in order to prevent harm to yourself or others, and to prevent damage to property.



Denotes a prohibition  
- You **MUST NOT** do



Denotes a requirement  
- You **MUST** do



**CAUTION**

Items where there is potential of **injury** or **property damage**.



**Read the manual and follow all instructions.**

- Use of product other than as described in the manual may cause accident.



**Use only for measuring.**

- Use for any purpose other than measuring may cause damage or wear to the instrument. Improper use may also cause accident.



**Handle with Care.**

- Do not drop or subject instrument to excessive shock. Do not place under heavy objects. Improper handling may cause damage or poor accuracy.



**Do not disassemble or modify.**

- Doing so may cause accident or injury. Please contact distributor or place of purchase for service.



**Use and store only in the following conditions:**

- Dry location protected from rain, water, and oils.
- Protected from direct sunlight.
- Location that does not become hot.
- Location protected from use by children and unauthorized people.
- Use in conditions other than indicated above may result in poor accuracy, damage to product, or cause accidents or injury.




**After use, treat with rust preventive and store in dry location protected from direct sunlight.**

Please refer to the S-Line Snap Gauge Manual for instruction on using the Gauge.

## GAUGE MOUNTING

Attach the Snap Gauge as shown below. Insert the Lever bolt through the stand and into the Stand Mounting Hole on the Snap Gauge (sold separately) and tighten to secure the Gauge.

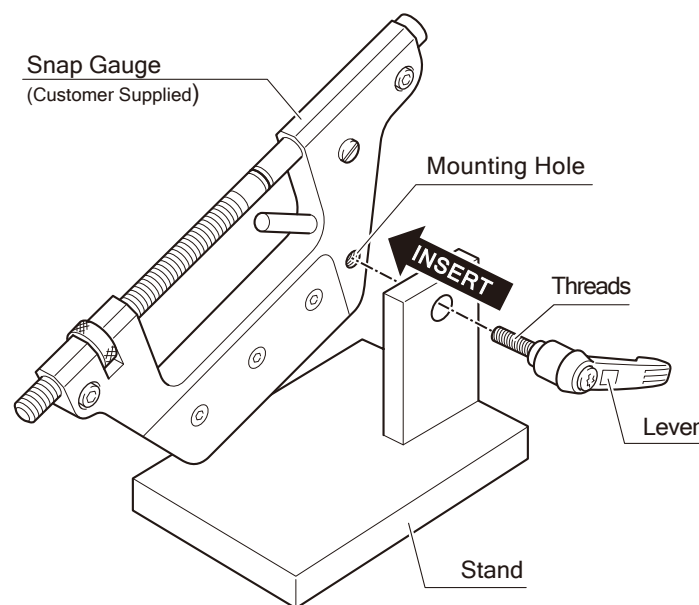

## SPECIFICATIONS

- For use with . . . . . S-Line Snap Gauge, ALD Series
- Material . . . . . Steel
- Base . . . . . approx. 80x120mm
- Weight . . . . . approx. 1.3kg

**SK Niigata Seiki Co., Ltd.**

6-15-22, Tsukanome, Sanjo, Niigata, Japan 955-0055  
TEL: +81-256-31-5670 FAX: +81-256-39-7730  
MAIL: [intl.sales@niigataseiki.co.jp](mailto:intl.sales@niigataseiki.co.jp)  
URL [http:// www.niigataseiki.co.jp](http://www.niigataseiki.co.jp)