


Thank you for purchasing the Digital Caliper Gauge.  
For proper use, please read this manual thoroughly and follow the directions.

### ■ PARTS IDENTIFICATION

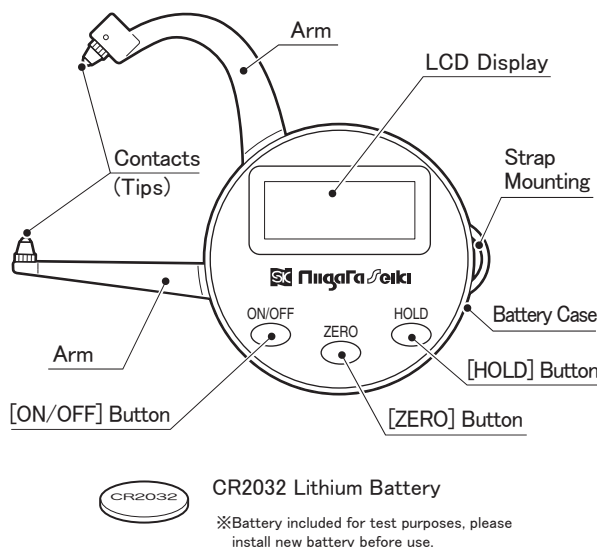


### ■ HOW TO USE

- ① Make sure the tips of the Arms are clean.
  - ② Press the [ON/OFF] Button to turn on power.
  - ③ With the Arms closed so that the tips are touching, press the [ZERO] Button. Do not move the arms for about 1 sec. and "0.00" will display.
- ※ If the Arms are moved too soon, the wrong value may be displayed. Make sure the Display reads "0.00" with the tips touching before use.
- ④ Place the object to be measured between the tips of the Arms, and the Display will show the measurement.
  - ⑤ To turn off, press and hold the [ON/OFF] Button about one second.
- ※ Comparative measurements can be made by setting the zero point on the reference part.
- ※ Press the [HOLD] Button to fix the reading on the Display. Press again to release.

### ■ INSERTING BATTERY

Pull out the Battery Case by pulling on the two tabs on the sides. Place the Battery with the "+" side up, and replace the Case.

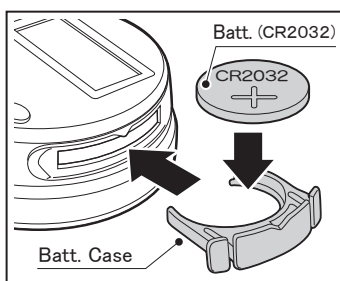

### ⚠ PLEASE NOTE

Use only CR2032 (Lithium coin cell) Battery.

Refer to the drawing at left to make sure the Battery is properly inserted.

### ■ APPLICATIONS • FEATURES

- Measuring instrument for outside dimensions.
- Convenient size for carrying.
- Digital display for easy reading.
- HOLD feature to fix reading on the Display.
- Strap mounting hole.
- Auto display off (after ~2 minutes.)

### ■ SPECIFICATIONS

Model	EDC-A225
Resolution	0.02mm
Meas. Range	0-25mm
Max Inst. Error	• 0.00 ~ 5.00mm: $\pm 0.04$ mm • 5.02 ~ 25.00mm: $\pm 0.08$ mm
Comparative Measurement	• Meas. Range: $\pm 1$ mm at any point • Instrumental Error: $\pm 0.04$ mm
Mass	90g
Power	Coin type lithium battery CR2032 $\times$ 1
Accessories	Coin type lithium battery CR2032 $\times$ 1 (for test)

### ⚠ NOTICE

- This is a precision instrument, handle with care.
- Keep instrument away from direct sunlight and high temperatures such as in a car, or near a stove or heat source.
- Keep instrument away from water and oil.
- After use, use a soft cloth to remove any dirt or cutting chips. Store out of reach of children.
- Use instrument only for intended purpose.

### TROUBLESHOOTING

ERROR	CORRECTIVE ACTION
<ul style="list-style-type: none"> <li>● LCD does not display.</li> <li>● Displayed value is unstable.</li> <li>● Display is not clear.</li> </ul>	<ul style="list-style-type: none"> <li>● Cycle power by removing and replacing battery.</li> <li>● Replace battery with new one.</li> </ul>

※ If problem persists, or if you have any questions, please contact distributor or place of purchase.

※ Please note, manufacturer is unable to respond to inquiries or provide service directly. Please contact distributor or place of purchase.

**SK Niigata seiki Co., Ltd.**

5-3-14, Tsukanome, Sanjo, Niigata, Japan, 955-0055  
Tel. : +81-256-33-5522 Fax. : +81-256-33-5518  
MAIL intl.sales@niigataseiki.co.jp  
URL http://www.niigataseiki.co.jp

E952-Q2

2006