


Thank you for purchasing the Digital Caliper Gauge.  
For proper use, please read this manual thoroughly and follow the directions.

### ■ PARTS IDENTIFICATION

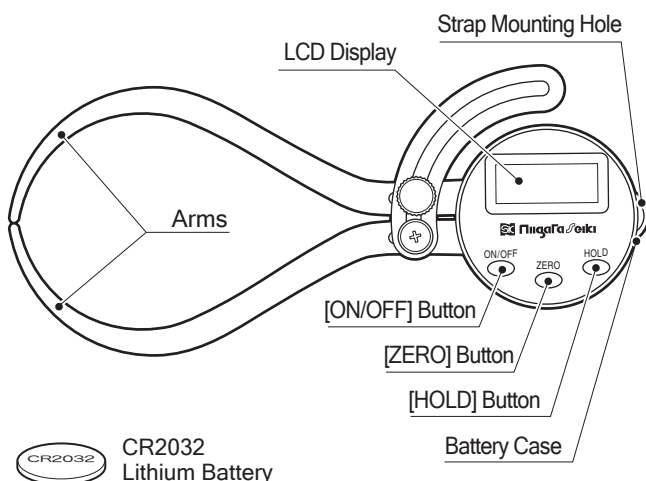


### ■ HOW TO USE

- ① Make sure the tips of the Arms are clean.
- ② Press the [ON/OFF] Button to turn on power.
- ③ With the Arms closed so that the tips are touching, press the [ZERO] Button. Do not move the arms for about 1 sec. and "0.0" will display.
- ※ If the Arms are moved too soon, the wrong value may be displayed. Make sure the Display reads "0.0" with the tips touching before use.
- ④ Place the object to be measured between the tips of the Arms and the Display will show the measurement.
- ⑤ To turn off, press and hold the [ON/OFF] Button for about one second.
- ※ Comparative measurements can be made by setting the zero point on the reference part.
- ※ Press the [HOLD] Button to fix the reading on the Display. Press again to release.

### ■ INSERTING BATTERY

Pull out the Battery Case by pulling on the two tabs on the sides. Place the Battery with the "+" side up, and replace the Case.

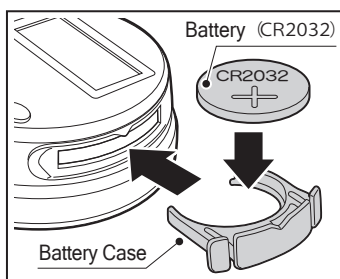

### ⚠ PLEASE NOTE

Use only CR2032 (Lithium coin cell) Battery. Refer to the drawing at left to make sure the Battery is properly inserted.

### ■ APPLICATIONS • FEATURES

- Measuring instrument for outside dimensions.
- Digital display for easy reading.
- HOLD feature to fix reading on the display.
- Strap mounting hole.
- Auto Off function (after ~2 to 5 minutes.)

### ■ SPECIFICATIONS

|             |  |
|-------------|--|
| Model       | EDC-A1150                                      |
| Resolution  | 0.1 mm   |
| Meas. Range | 0-150 mm                                       |
| Inst. Error | ±0.2 mm  |
| Mass        | ~140 g   |
| Power       | CR2032 ×1<br>Coin type lithium battery         |
| Accessories | CR2032<br>Coin type lithium battery (for test) |

### ⚠ NOTICE

- This is a precision instrument, handle with care.
- Keep instrument away from direct sunlight and high temperatures such as in a car, or near a stove or heat source.
- Keep instrument away from water and oil.
- After use, use a soft cloth to remove any dirt or cutting chips. Store out of reach of children.
- Use instrument only for intended purpose.

### TROUBLESHOOTING

| ERROR  | CORRECTIVE ACTION   |
|--|---|
| <ul style="list-style-type: none"> <li>● LCD does not display.</li> <li>● Displayed value is unstable.</li> <li>● Display is not clear.</li> </ul> | <ul style="list-style-type: none"> <li>● Cycle power by removing and replacing battery.</li> <li>● Replace battery with new one.</li> </ul> |

※ If problem persists, or if you have any questions, please contact distributor or place of purchase.

※ Please note, manufacturer is unable to respond to inquiries or provide service directly. Please contact distributor or place of purchase.

**SK Niigata Seiki Co., Ltd.**

5-3-14, Tsukanome, Sanjo, Niigata, Japan, 955-0055  
☎ +81-256-33-5522 FAX : +81-256-33-5518

MAIL: [intl.sales@niigataseiki.co.jp](mailto:intl.sales@niigataseiki.co.jp)  
URL: <http://www.niigataseiki.co.jp>

E1007-Q1

2001