

Flatness Measurement Calculation Program updates (English)

If using Flatness Measurement Calculation Program check the version number and if appropriate, please update. To check the version number, run FL-E.exe, and select "File / About" in the menu bar to display version info.

File name : FL-E.exe
applicable version : 2.0_0 ~ 2.0_4 and 2.1_0 ~ 2.1_1

After Update : 2.0_0 ~ 2.0_4 >>> 2.0_5
2.1_0 ~ 2.1_1 >>> 2.1_2

Updates:

Output display and print for:

Total lengthwise measurement length = Lengthwise measurement pitch * Lengthwise No. of divisions
Displayed calculation value of Crosswise measurement pitch * Lengthwise No. of divisions has been corrected.

** There is no impact on portion relating to flatness calculation.

Update Procedure:

For some Windows installations, you must have administrator privileges.

A) If "FL-E.exe" has been copied from CD to hard drive or USB.
Update the file copy that is being used.

- 1) Download new executable file "FL_Update-E.exe"
- 2) Move or copy the "FL_Update-E.exe" file to the location where "FL-E.exe" is.
- 3) View the properties of "FL-E.exe" file and remove the "Read Only" check mark; click "OK".
- 4) Run FL_Update-E.exe
- 5) Click the "Update" button when the pop up window appears.
- 6) Click the "End" button.

Check the version display to confirm the update.

If the version number is correct, the update is complete.

B) If using the CD to run "FL-E.exe" directly.

Copy the "FL-E.exe" file to hard drive or USB, and follow the previous procedure to update.

Once updated, please create a new CD using the updated "FL-E.exe" file.

NOTICE:

There is a different update file for each language version of the software.

Please be sure to download the executable file from the page corresponding to the proper language.

Download

[FL_update-E.exe](#)

[readme-E.pdf](#)