


この度は、スケールルーペ用ライトをお買い上げいただきまして、誠にありがとうございます。
 本品はライトスケールルーペ LSL-26 / LSL-35に取り付けて使用する専用のライトです。
 ご使用に際し、本説明書を最後までお読みいただき、正しい使い方でも長く御愛用ください
 ますようお願い申し上げます。

■各部の名称

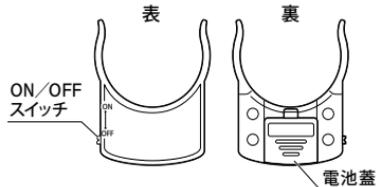

■仕様

品番	適用スケールルーペ
L-26	LSL-26
L-35	LSL-35

- ・使用電池：LR41×3個
※電池は別途ご購入ください。
- ・LEDライト連続使用時間
：約10時間 (新品電池使用時)


■取り付け方



■電池のセット・交換

- ①電池蓋を矢印の向きに開けます。
- ②⊕⊖の向きを間違えないようにLR41を3個、図のように入れてください。
- ③電池蓋を元通りに装着してください。

△ご注意 電池は必ずLR41をお使いください。

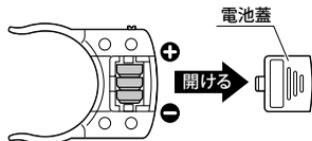

△ご注意


- 強い衝撃を与えたり、落としたりしないでください。
破損の原因となり危険です。
- 高温多湿下での使用・保管は変質・変形の恐れがありますので、避けてください。
- 本製品の用途以外のご使用は、絶対におやめください。

SK 新潟精機株式会社

〒955-0055 新潟県三条市塚野目5丁目3番14号
 ☎ (0256) 33-5502(代) FAX (0256) 33-5528
 URL <http://www.niigataseiki.co.jp>
 E1068-Z 2303500

Thank you for purchasing the Scale Loupe Light.
 This product is dedicated light for LSL-26 / LSL-35 Scale Loupe.
 Please read this instruction manual thoroughly before use to insure proper operation and long service.

■PARTS IDENTIFICATION

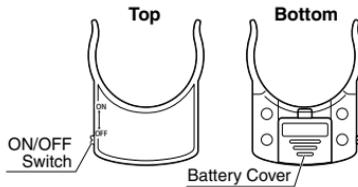


■SPECIFICATION

Model No.	Applicable Scale Loupe
L-26	LSL-26
L-35	LSL-35

- ・Battery: LR41 (3x)
※Please purchase battery separately
- ・LED continuous on time: approx. 10 hr. ※For new battery


■TO ATTACH

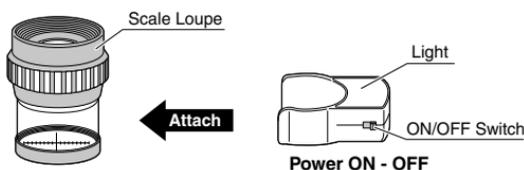

■INSERTING・REPLACING BATTERY

- ①Slide Battery Cover in direction of arrow to remove.
- ②Insert 3x LR41 cells into the compartment.
Use care to make sure they are aligned in the proper direction.
- ③Replace Battery Cover.

△NOTICE Use only LR41 type cells.

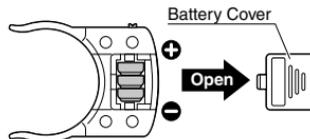

△CAUTION

- Do not drop or expose to strong shock; this may cause damage.
- Do not expose to excessive heat or humidity during use or storage. There is risk of deformation and damage.
- Use only for specified application.

SK Niigata Seiki Co., Ltd.

5-3-14, Tsukanome, Sanjo, Niigata, Japan, 955-0055
 Tel. : +81-256-33-5522 Fax. : +81-256-33-5518
 MAIL intl.sales@niigataseiki.co.jp
 URL <http://www.niigataseiki.co.jp>