


Wireless Receiver WI-1M Driver Installation Procedure


Thank you for purchasing the WI-1M Wireless Receiver.
Please read this manual thoroughly for instruction on driver installation and use.

■ Package Contents

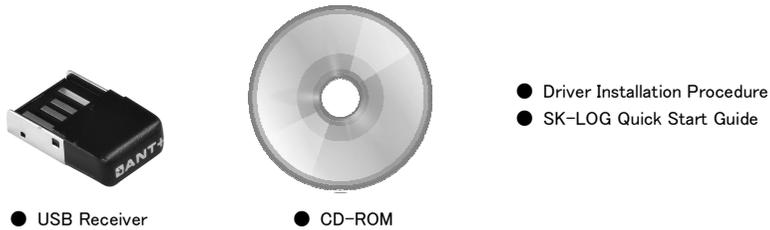

■ Copying Files ※ Driver installation requires administrator privileges on the computer.

- ① Insert the provided CD-ROM into the computer's CD-ROM drive.
 - ② Insert the Wireless Receiver into the USB port.
 - ③ Copy the [ANTUSB2] folder from the CD-Rom to the computer.
- ※ In the examples of this manual, the folder is copied to the D:\Driver folder on the computer.
※ CDM*** files are not used for this product.

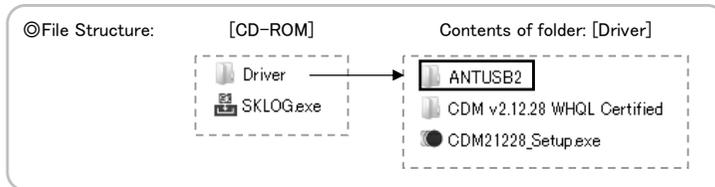

■ Driver Installation

◎ For Windows10 computer connected to the internet

- ① The driver will install automatically when the Wireless Receiver is plugged into the USB port.
- ※ When 『ANT USB-m』 is displayed on the device manager, the driver has been installed successfully.




■ Driver Installation


- ◎ If computer is not connected to the Internet, or if computer OS is not Windows10, or
- ◎ If Driver does not automatically install

- ① Open the Device Manager.
- ② Right click on 『ANT USB-m Stick』 and select [Properties].


- ③ Select [Update Driver] in the Properties menu.

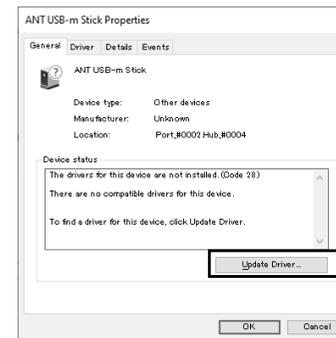

- ④ Select [Browse my computer for driver software].

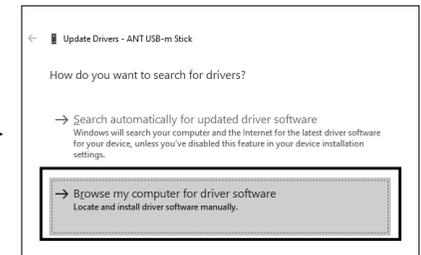

- ⑤ Select [Browse] and enter the location of the 『ANTUSB2』 folder copied to the computer as described on page 1.

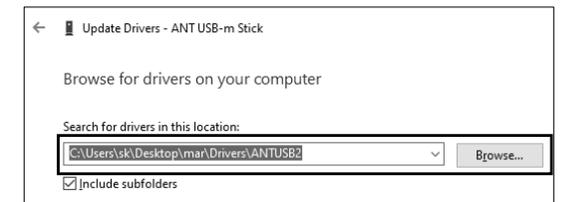

- ※ When installation is complete, remove the CD-ROM from the drive.
- ※ Keep the Wireless Receiver in the USB port in order to receive the measured values.

■ Wireless Receiver Specifications

- Frequency 2400MHz
- No. of Channels 3
- Comm. Distance up to 6m
- Supported OS Windows7 (or later)
- Interface USB1.1 (or later)
- Hard Drive Req. 10MB

Niigata seiki Co., Ltd.

5-3-14, Tsukinomae, Sanjo, Niigata, Japan, 955-0055
Tel.: +81-258-33-5522 Fax.: +81-258-33-5518
MAIL: intl.sales@niigataseiki.co.jp
URL: http://www.niigataseiki.co.jp

I421-K

2011

ワイヤレス受信機 Wireless Receiver WI-1M ドライバーインストール手順

この度はワイヤレス受信機をお買い上げ頂きありがとうございます。
ご使用前に本書をよくお読みいただき、ドライバーのインストールを行なってください。

■ 梱包内容



● ワイヤレス受信機




● CD-ROM

- ドライバーインストール手順
- SK-LOG クイックスタートガイド

■ 準備 ※ドライバーのインストールにはパソコンの Administrator 権限が必要です。

- ① 付属の CD-ROM を、お使いのパソコンの CD-ROM ドライブに入れてください。
- ② パソコンの USB ポートに、ワイヤレス受信機を挿し込んでください。
- ③ CD-ROM 内の【ANTUSB2 フォルダ】を、お使いのパソコンの任意の場所にコピーしてください。
※この手順書内では D:\Driver フォルダ下にコピーして説明しています。
※CDM***関連のファイルは本製品では使用しません。

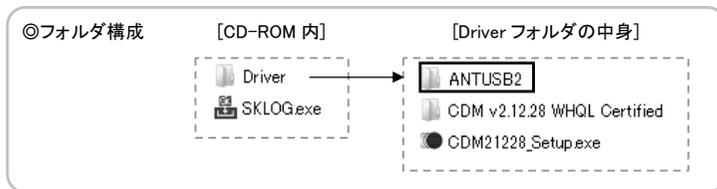

■ ドライバーインストール方法

◎ OS が Windows10 で、インターネットに接続している場合

- ① ワイヤレス受信機をパソコンの USB ポートに挿し込むと、自動でドライバーがインストールされます。
- ※デバイスマネージャーで『ANT USB-m』が表示されていると、ドライバーのインストールに成功しています。




■ ドライバーインストール方法

◎ OS が Windows10 以外、またはインターネットに接続していない場合


◎ 自動でドライバーがインストールされない場合

- ① デバイスマネージャを開いてください。
- ② 『ANT USB-m Stick』を右クリックし、プロパティを選択してください。


- ③ プロパティ画面が開いたら、『ドライバーの更新』を選択してください。

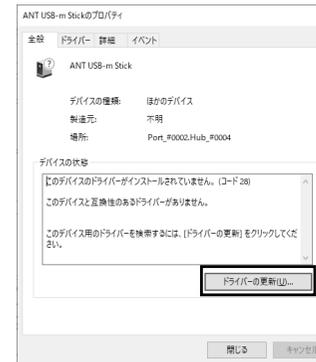

- ④ 『コンピュータを参照してドライバーソフトウェアを検索』を選択します。

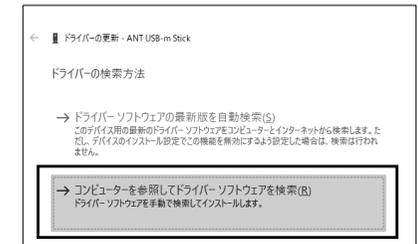

- ⑤ 『参照』をクリックし、『P1 ■ 準備』でパソコン上にコピーした『ANTUSB2 フォルダ』の場所を指定してください。

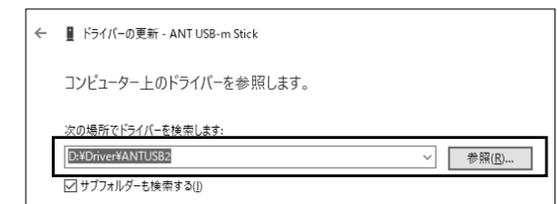

※ドライバーのインストール完了後、CD-ROM をパソコンから取り出してください。
※ワイヤレス受信機は測定値を受信しますので、USB ポートに挿したままご使用ください。

■ ワイヤレス受信機 仕様

- 周波数帯 2400MHz
- チャンネル数 3
- 通信距離 最大 6m
- 対応 OS Windows7 以降
- I/F USB1.1 以降
- 必要ディスク容量 10MB 以上

発売元 **SC 新潟精機株式会社**
〒955-0055 新潟県三条市塚野目5丁目3番14号
☎(0256)33-5502(代) FAX(0256)33-5528
URL <http://www.niigataseiki.co.jp>
I421-K 2011